

NPSM481 Series – Single phase / DC input switching power supply with integrated PFC

■ **Main Features:**

- High efficiency and extremely compact size
- Only 56mm width aluminum enclosure
- Active PFC
- Overload 150%
- Constant current or hiccup mode limitation, user settable
- Wide range of output voltage
- Easy parallelable for power increase
- Includes models with internal Oring circuit
- Up to 60°C operating temperature with no derating



INDEX	
Installation Requirements	Page 2
Declaration of Conformity	2
User Instructions	3
Connections	4
Dimensions	4
Distances	4
Mounting	4
Dismounting	5
Input Connections	5
Environment	5
Accessory Device	5

READ THIS CAREFULLY BEFORE INSTALLATION!	VOR DER INSTALLATION BITTE FOLGENDE SICHERHEITSHINWEISE BEACHTEN	LEGGERE ATTENTAMENTE PRIMA DELL'INSTALLAZIONE!	A LIRE ATTENTIVEMENT AVANT L'INSTALLATION!
<p>Before operating, read this document thoroughly and retain it for future reference. Non-respect of these instructions may reduce performances and safety of the devices and cause danger for people and property. The products must be installed, operated, serviced and maintained by qualified personnel in compliance with applicable standards and regulations. Don't open the device, it does not contain replaceable components, the tripping of the internal fuse (if included) is caused by an internal failure. Don't repair or modify the device, if malfunction or failure should occur during operation, send unit to the factory for inspection. No responsibility is assumed by TDK-Lambda Switzerland SA for any consequences deriving from the use of this material.</p>	<p>Lesen Sie dieses Dokument vor der Inbetriebnahme sorgfältig durch und bewahren Sie es zum späteren Nachschlagen auf. Die Nichtbeachtung dieser Anweisungen kann die Funktion und Sicherheit der Geräte beeinträchtigen und birgt Gefahren für Personen und Eigentum. Die Geräte müssen von qualifiziertem Personal unter Einhaltung der geltenden Normen und Vorschriften installiert, betrieben, gewartet und instand gehalten werden. Öffnen Sie das Gerät nicht, es enthält keine austauschbaren Komponenten, das Auslösen der internen Sicherung (falls vorhanden) ist stets auf tiefergehende Fehler im Schaltkreis zurück zu führen. Reparieren oder modifizieren Sie das Gerät nicht. Sollte während des Betriebs eine Fehlfunktion oder ein Defekt auftreten, schicken Sie das Gerät zur Überprüfung ins Werk. TDK-Lambda Switzerland SA übernimmt keine Haftung für die Folgen, die sich aus dem Einsatz dieses Gerätes ergeben.</p>	<p>Prima dell'installazione, leggere attentamente questo documento istruzioni e conservarle per future consultazioni. L'inosservanza delle presenti istruzioni può compromettere le caratteristiche e la sicurezza dell'apparecchio e causare pericolo per le persone e le cose. Il prodotto deve essere installato, utilizzato e riparato da personale qualificato e nel rispetto delle normative vigenti. Non aprire il prodotto, esso non contiene componenti sostituibili, il guasto del fusibile interno (se previsto) è causato da un guasto interno. Non tentare di riparare o modificare il prodotto, se durante il funzionamento si verificano guasti o anomalie, inviarlo al produttore per il controllo. TDK-Lambda Switzerland SA non si assume nessuna responsabilità per qualunque conseguenza derivante dall'uso di questo materiale.</p>	<p>Lisez ces instructions avant l'installation, conservez ce manuel pour référence future. Défaut de se conformer à ces instructions peut affecter les caractéristiques et la sécurité du dispositif de danger et de causer aux personnes ou aux biens. Les produits doivent être installés, exploités et entretenus par personnel qualifié et en conformité avec les règlements. N'ouvrez pas le produit, il ne contient aucune pièce réparable, le déclenchement du fusible interne (le cas échéant) est causé par un défaut interne. Ne pas essayer de réparer ou modifier le produit ; si des défaillances se produisent pendant le fonctionnement ou les dysfonctionnements, le retourner au fabricant pour inspection. TDK-Lambda Switzerland SA n'assume aucune responsabilité des conséquences éventuelles découlant de l'utilisation des produits.</p>
CAUTION	ACHTUNG	ATTENZIONE	AVERTISSEMENT
<p>RISK OF BURNS, EXPLOSION, FIRE, ELECTRICAL SHOCK, PERSONAL INJURY. Never carry out work on live parts! Danger of fatal injury! The product's enclosure may be hot, allow time for cooling product before touching it. Do not allow liquids or foreign objects to enter into the products. To avoid sparks, do not connect or disconnect the device before having previously turned-off input power and wait for internal capacitors discharge (minimum 1 minute).</p>	<p>GEFAHR VON VERBRENNUNGEN, EXPLOSIONEN, FEUER, STROMSCHLAG, PERSONENSCHÄDEN. Führen Sie niemals Arbeiten an spannungsführenden Teilen durch! Gefahr von tödlichen Verletzungen! Das Gehäuse des Gerätes kann heiß sein, lassen Sie Zeit zum Abkühlen des Gerätes, bevor Sie es berühren. Lassen Sie keine Flüssigkeiten oder Fremdkörper in die Geräte eindringen. Um Überschläge zu vermeiden, schließen Sie das Gerät nicht an oder trennen Sie es nicht ohne vorher die Eingangsspannung abgeschaltet zu haben, und warten Sie die Entladung der internen Kondensatoren ab (mindestens 1 Minute).</p>	<p>RISCHIO USTIONI, ESPLOSIONE, INCENDIO, SCOSSA, LESIONI GRAVI. Non effettuare mai operazioni sulle parti sotto tensione! Pericolo di lesioni letali! Il contenitore può scottare, lasciar quindi raffreddare il dispositivo prima di toccarlo. Non far entrare liquidi o oggetti estranei nel dispositivo. Per evitare scintille, non collegare o scollegare l'apparecchiatura prima di avere tolto tensione di ingresso e prima che sia avvenuta la scarica dei condensatori interni (min. 1 minuto).</p>	<p>RISQUE DE BRULURES, EXPLOSION, INCENDIE, ELECTROCUTION, DOMMAGE AUX PERSONNES. Ne jamais effectuer des opérations sur les parties sous tension! Danger de mort! Le récipient peut produire des brulures, le laisser refroidir avant de toucher l'appareil. Ne faites pas pénétrer des liquides ou des corps étrangers dans l'appareil. Pour éviter des étincelles, ne pas connecter ou déconnecter l'équipement jusqu'à ce que vous avez supprimé la tension d'entrée et avant qu'elle n'ait lieu de décharge des condensateurs internes (minimum 1 minute).</p>

DECLARATION OF CONFORMITY

	<p>TDK-LAMBDA SWITZERLAND SA Via Luserte Sud 6, 6572 Quartino - Switzerland Phone: +41-(0)91 840 14 46 / 840 14 48; Fax: +41-(0)91 840 14 47 E-mail: TLN.info@tdk.com</p>															
	<p>This Declaration of Conformity is suitable to the European Standard EN45014 "General criteria for supplier's declaration of conformity". We declare under our sole responsibility that the device included in this box, has passed all processing inspections and the final test and it is in conformity with the product requirements, including all reference codes and supply specifications.</p>															
<p>ROHS compliance: the product respects the EC requirements related to ROHS substances, according to "Restriction of Hazardous Substances" as per document 2011/65/UE REACH compliance: the product respects the EC requirements related to REACH SVHC directive (EC) 1907/2006 Note: all the reported information comes from our suppliers, TDK-LAMBDA SWITZERLAND SA has not run any test to evaluate if the specific elements are present.</p>																
<p>All indicated devices are designed according to the latest Reference standards, if not expressly indicated through the official documents or files, they have been tested through our internal pre-compliance testing. Consult directly on www.nextys.com the reference standards applied to each model.</p>																
<table border="1"> <thead> <tr> <th>Code</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>NPSM481-24</td> <td>Single phase with integrated PFC switching power supply IN 100 - 240Vac / OUT 24Vdc - 20A</td> </tr> <tr> <td>NPSM481-24P</td> <td>Single phase with integrated PFC switching power supply IN 100 - 240Vac / OUT 24Vdc - 20A + ORing circuit</td> </tr> <tr> <td>NPSM481-48</td> <td>Single phase with integrated PFC switching power supply IN 100 - 240Vac / OUT 48Vdc - 10A</td> </tr> <tr> <td>NPSM481-48P</td> <td>Single phase with integrated PFC switching power supply IN 100 - 240Vac / OUT 48Vdc - 10A + ORing circuit</td> </tr> <tr> <td>NPSM481-72</td> <td>Single phase with integrated PFC switching power supply IN 100 - 240Vac / OUT 72Vdc - 6.7A</td> </tr> <tr> <td>NPSM481-72P</td> <td>Single phase with integrated PFC switching power supply IN 100 - 240Vac / OUT 72Vdc - 6.7A + ORing circuit</td> </tr> </tbody> </table>	Code	Description	NPSM481-24	Single phase with integrated PFC switching power supply IN 100 - 240Vac / OUT 24Vdc - 20A	NPSM481-24P	Single phase with integrated PFC switching power supply IN 100 - 240Vac / OUT 24Vdc - 20A + ORing circuit	NPSM481-48	Single phase with integrated PFC switching power supply IN 100 - 240Vac / OUT 48Vdc - 10A	NPSM481-48P	Single phase with integrated PFC switching power supply IN 100 - 240Vac / OUT 48Vdc - 10A + ORing circuit	NPSM481-72	Single phase with integrated PFC switching power supply IN 100 - 240Vac / OUT 72Vdc - 6.7A	NPSM481-72P	Single phase with integrated PFC switching power supply IN 100 - 240Vac / OUT 72Vdc - 6.7A + ORing circuit	<table border="1"> <tr> <td> <p>Certifications and approvals</p> </td> </tr> </table>	<p>Certifications and approvals</p>
Code	Description															
NPSM481-24	Single phase with integrated PFC switching power supply IN 100 - 240Vac / OUT 24Vdc - 20A															
NPSM481-24P	Single phase with integrated PFC switching power supply IN 100 - 240Vac / OUT 24Vdc - 20A + ORing circuit															
NPSM481-48	Single phase with integrated PFC switching power supply IN 100 - 240Vac / OUT 48Vdc - 10A															
NPSM481-48P	Single phase with integrated PFC switching power supply IN 100 - 240Vac / OUT 48Vdc - 10A + ORing circuit															
NPSM481-72	Single phase with integrated PFC switching power supply IN 100 - 240Vac / OUT 72Vdc - 6.7A															
NPSM481-72P	Single phase with integrated PFC switching power supply IN 100 - 240Vac / OUT 72Vdc - 6.7A + ORing circuit															
<p>Certifications and approvals</p>																

Reference standards	2014/35/EU	(Low Voltage Directive)
	2014/30/EU	(EMC directive)
	EN61010-1	(Safety Standard)
	EN61010-2-201	(Safety Standard)
	UL508	(Certified - IND. CONT. EQ. 4WX9 file no. E356563)
	UL61010-1	(Certified - IND. CONT. EQ. 4WX9 file no. E356563)
	UL61010-2-201	(Certified - IND. CONT. EQ. 4WX9 file no. E356563)
	EN61000-6-2	(Generic immunity standard for industrial environments)
	- EN61000-4-2	(Electrostatic discharge immunity test)
	- EN61000-4-3	(Radiated, radio-frequency, electromagnetic field immunity test)
	- EN61000-4-4	(Electrical fast transient/burst immunity test)
	- EN61000-4-5	(Surge immunity test)
	- EN61000-4-6	(Immunity to conducted disturbances, induced by radio-frequency fields test)
	- EN61000-4-8	(Power frequency magnetic field immunity test)
- EN61000-4-11	(Voltage dips, short interruptions and voltage immunity test)	
EN61000-6-3	(Generic emission standard for residential environments)	
- EN55011	(CISPR11 - EMC)	
- EN61000-3-2	(Limits for harmonics current emissions)	
- EN61000-3-3	(Limitation of voltage fluctuations and flicker in low-voltage supply systems for equipment with rated current ≤ 16A)	

USER INSTRUCTIONS	
1)	Description: DIN rail mountable primary switched-mode power supply with 90...264Vac or 110...345Vdc input (UL not evaluated), suitable for single phase main line and DC line.
2)	Installation: use DIN-rails according to EN60715. Installation should be made vertically (see Fig.4). For better device stability fix the rail to the wall close to the point where the device is to be mounted. In order to guarantee sufficient convection, we recommend observing a minimum distance to other modules (see Fig.3). The device is provided with a thermal protection; a limited air flow can cause the thermal protection tripping. The SMPS automatically restarts after cooling. To get normal operation reduce the temperature of the air surrounding the power supply, increase the ventilation or reduce the load (see Fig.8).
3)	Connections: the device is equipped with pluggable screw terminals. To avoid sparks, do not connect or disconnect the connectors before having previously turned-off input power and waited for internal capacitors discharge (minimum 1 minute). In order to comply with UL certification, use appropriate copper cables of indicated cross section, designed for an operating temperatures > 105°C. Strip the connecting ends of the wires according to the indication and ensure that all strands of a stranded wire enter the terminal connection (see Fig.5).
4)	Input protection: the device input is provided with varistors against overvoltage. Input is provided with internal fuses 8AT/250Vac, thus an external short circuit/overcurrent protection must be provided by the end user (see Fig.6). For operation on a single phase system, a protection fuse on the phase must be provided. Surge protection: it is strongly recommended to provide external surge arresters (SPD) according to local regulations.
5)	AC input connection: the device can be connected to single phase AC lines with Uin 100Vac or 120...240Vac (see Fig.7). Derate to 87.5% load if connected to single phase AC lines with Uin 100Vac. Ensure that the PE conductor is properly connected. Please connect first the PE.
6)	DC input connection: connect L terminal to (+) positive pole, N terminal to (-) negative pole and  terminal to GND. Rated voltage 110...345Vdc (UL not evaluated). The device is also suitable for photovoltaic or wind turbine applications (see Fig.7).
7)	Output connection: the device is suitable for SELV and PELV circuitry. Pay attention NPSM481-72 (P) are not SELV. Uout can be adjusted with a potentiometer to a wide range (see Fig.1). Check Uout before connecting the power supply to the load. With output voltage set to the max. value, the continuous [current x voltage] must not exceed the nominal power. If the output current exceed 15A the load must be wired to the power supply using all the four poles of the output connector.
8)	Parallel connection and redundancy: power supplies can be connected in parallel to increase power. For paralleling for power set the Ilim jumper to C.C. algorithm. Uout must be set uniformly (±100mV) on each power supply and the wiring must be symmetrical to ensure an equal current distribution. Models with "P" suffix have an integrated ORing circuit. For redundant connection, use the Models "P" or an external isolating device must be used (see accessory device).
9)	Output protection: the device is protected against overload (OL) / short circuit (SC) / overvoltage (OV) / overtemperature (OT). OL and SC: are controlled by a hiccup mode or a constant current (C.C.) mode protection with the following behaviour: The hiccup mode or C.C. mode are selectable with Jumper (see Fig.1). OL behaviour in hiccup mode: Max. OL = 1.5 x In the output voltage remains constant at nominal voltage for 5s and after that time the device starts and ON/OFF cycle. OL behaviour in C.C. mode: the maximum output current is limited at 1.1 x In if the load resistance is further decreased the output voltage starts to drop. SC behaviour in hiccup mode: the device supplies 1.5 x In for 5s, after that time it switches OFF for 10s. The ON/OFF cycle is repeated continuously. SC behaviour in C.C. mode: the device supplies 1.1 x In continuously into the short circuit without switching OFF. Output OV circuit protection: the output is protected against potential OV due to internal malfunction or coming from the load for Uout ≥ Unom x 1.2 – 1.3, depending on the model. OT protection: turns OFF the device if the internal temperature exceeds a safe limit. The device restarts automatically after cooling down. To recover to normal operation reduce air temperature surrounding the power supply, increase cooling or reduce load (see Fig.8).
10)	Feeding DC motors: it is possible to feed DC motors considering that when a motor starts-up under effort its consumption is much higher than the nominal current and it can trigger overcurrent protection (see accessory device). For these applications the C.C. (Constant Current) mode of current limitation is recommended. NOTE: motors can generate high conducted noise on the DC line. Therefore it is not recommended to feed on the same line motors and equipment sensitive to noise.
11)	Operation with Battery: when a battery is connected in parallel to the Output for backup purposes; the NPSM481 must be set in C.C. mode to avoid battery over-charging (see accessory device).
12)	Environmental: these products are IP20 (according to IEC 60529, not UL evaluated), and therefore chemicals/solvents, cleaning agents and other liquids must not be used.
13)	Environment: these power supplies are SMPS for use in applications within a Pollution Degree 2, overvoltage category II environment (overvoltage category III according to EN50178). Do not use in wet area or subject to moisture. These products are designed for indoor use only.
14)	Intended use: these are isolated devices suitable for SELV and PELV circuitry and are designed to be mounted on DIN rail and installed inside a protective enclosure. They are intended for general use such as in industrial control, communication, and instrumentation equipment. If the power supply is used in a way not specified in this manual, the protection provided by the equipment may be impaired. Don't use these devices in applications where malfunction may cause injury or death.


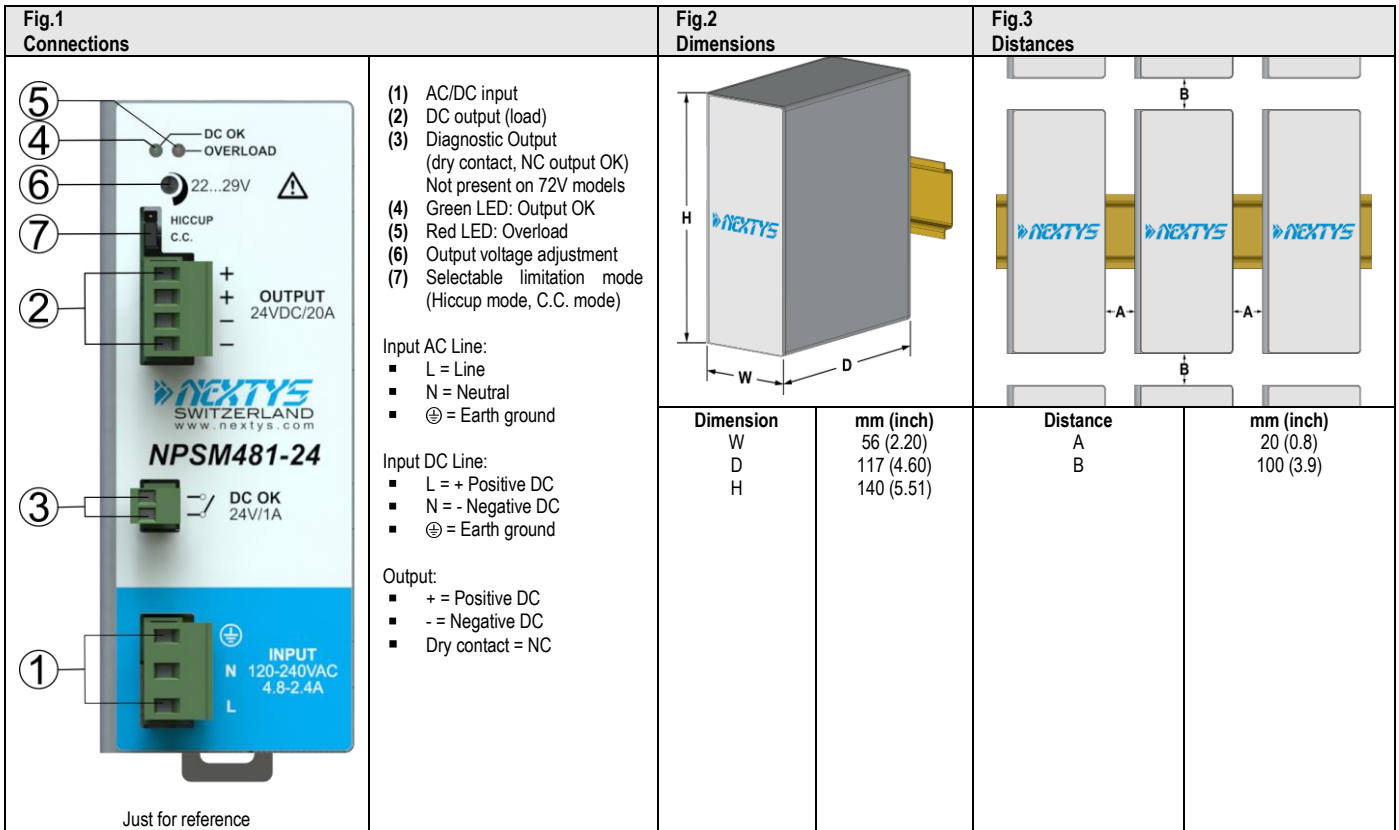


Fig.4
Mounting / Dismounting Instructions

For DIN rail fastening according to IEC 60715 TH35-7.5(-15).
Mounting as shown in figure, with input terminals on lower side, with suitable cooling and maintaining a proper distance between adjacent devices as specified in the I.S. manual of each family.

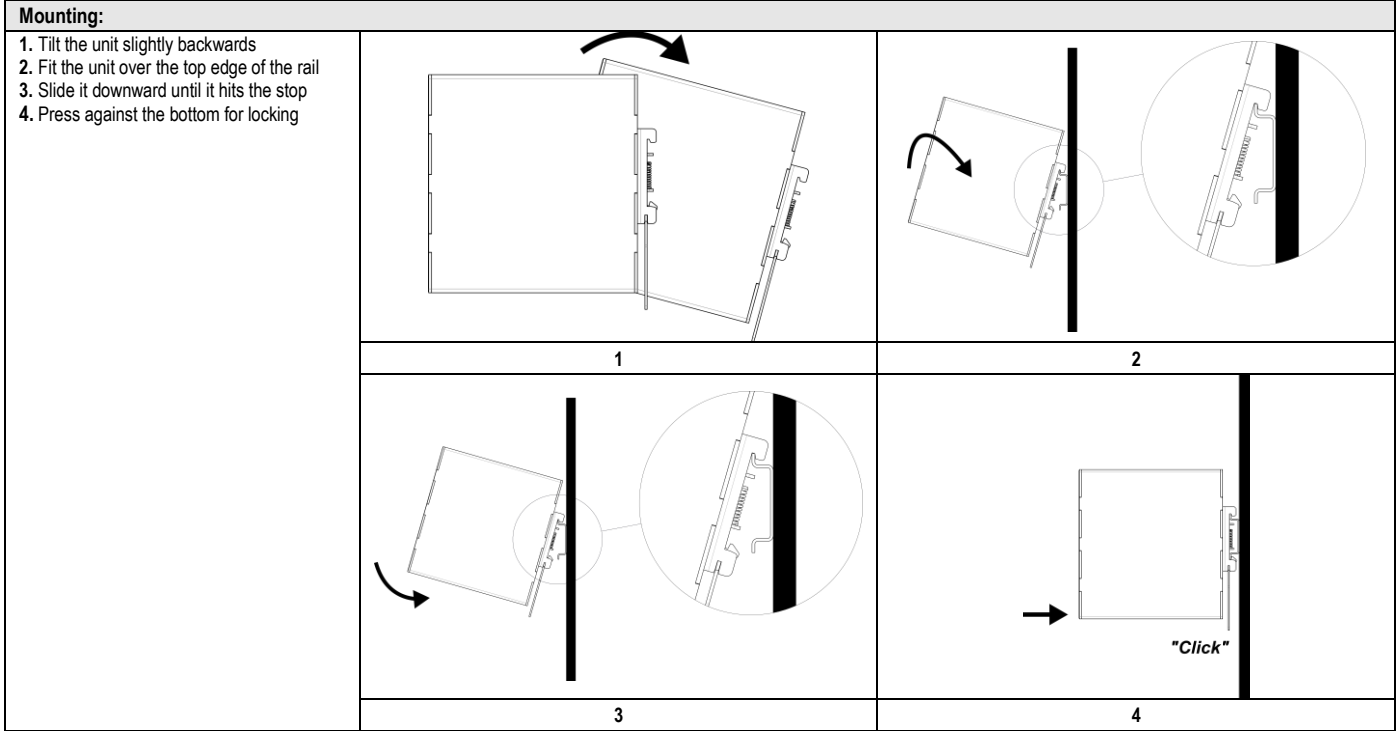

Dismounting:

1. Pull down the slide clamp lever
2. Tilt the unit upward
3. Unhook the unit from the rail

Fig.5 Recommended connecting cable

Recommended Tightening torque

Input / Output		
MFG	Nm	lbf in
Dinkle	0.51	4.5
ULO	0.51	4.5
Anytek	0.57	5
Würth	0.57	5

Signal

MFG	Nm	lbf in
Dinkle	0.2	1.7
ULO	0.2	1.7
Anytek	0.34	3
Würth	0.34	3

Cable size (solid and stranded)

Input / Output		
MFG	mm ²	AWG
Dinkle	2.5 – 0.2	12 – 28
ULO	2.5 – 0.2	12 – 28
Anytek	2.5 – 0.34	12 – 24
Würth	3.3 – 0.2	12 – 24

Signal

MFG	mm ²	AWG
Dinkle	1.5 – 0.2	14 – 28
ULO	1.5 – 0.5	16 – 28
Anytek	1.5 – 0.5	16 – 28
Würth	1.3 – 0.2	16 – 28

Stripping length
7 - 8mm / 0.28 - 0.32in

Fig.6 Input protection

MCB 10A C curve.
For USA and Canada, use the fuse type closest to the European equivalent type.

Surge protection: it is strongly recommended to provide external surge arresters (SPD) according to local regulations.

Fig.7 Input connections

AC Line

DC Line (UL not evaluated)

Fig.8 Environment

Operating temperature
-40°C...70°C
5...95% r.H. non condensing
UL Certified up to 50°C at 100Vac and 120Vac
UL Certified up to 60°C at 240Vac
Overtemperature protection
UL certified up to 2000m

Derating (UL not evaluated)

- 10W/°C over 50°C at 100Vac
- 7.6W/°C over 50°C at 120Vac
- 7.2W/°C over 60°C at 240Vac

Note:

- Data may change without prior notice in order to improve the product
- Please refer to the latest version of the "Instruction Manual" for each product by visiting www.nextys.com

See also the products below that can be used in conjunction with NPSM481 units (UL not evaluated)		(accessory device)
▪ OR20	20A Active ORing controller	
▪ OR50	50A Active ORing controller	
▪ DCU20	20A High performance DC UPS	
▪ DCW20	960W Combo DC-UPS / DC-DC Converter	
▪ BU150U	150J Buffer Module	
▪ NUPS12/24	Battery charger and DC UPS Module	
▪ NUPS960	40A DC UPS Module	
▪ MBC2K	2000W Motor brake controller	
▪ NBP30	Sealed Lead acid Battery pack	
▪ NCP12	Super Capacitors Module	
▪ NDW240	240W Programmable DC/DC Converter	
▪ NEF210	DC Overcurrent Protector / Static Switch	