

NPSM20 Series – Single phase / DC input switching power supply

■ Main Features:

- High efficiency
- Ultra compact size
- Plastic enclosure UL94-V0
- Class II (simplified wiring)
- Overload 170%
- Up to 50°C operating temperature with no derating



| INDEX | |
|---------------------------|------|
| | Page |
| Installation Requirements | 2 |
| Declaration of Conformity | 2 |
| User Instructions | 3 |
| Connections | 4 |
| Dimensions | 4 |
| Distances | 4 |
| Mounting | 4 |
| Dismounting | 5 |
| Input Connections | 5 |
| Environment | 5 |
| Accessory Device | 5 |



| READ THIS CAREFULLY BEFORE INSTALLATION! | LEGGERE ATTENTAMENTE PRIMA DELL'INSTALLAZIONE! | A LIRE ATTENTIVEMENT AVANT L'INSTALLATION! |
|--|---|--|
| Before operating, read this document thoroughly and retain it for future reference. Non-respect of these instructions may reduce performances and safety of the devices and cause danger | Prima dell'installazione, leggere attentamente questo documento istruzioni e conservarle per future consultazioni. L'inosservanza delle presenti istruzioni può compromettere le caratteristiche e la sicurezza dell'apparecchio e causare | Lisez ces instructions avant l'installation, conservez ce manuel pour référence future. Défaut de se conformer à ces instructions peut affecter les caractéristiques et la sécurité du dispositif de danger et de |
| for people and property. The products must be installed, operated, serviced and maintained by qualified personnel in compliance with applicable standards and regulations. | pericolo per le persone e le cose. Il prodotto deve essere installato, utilizzato e riparato da personale qualificato e nel rispetto delle normative vigenti. Non aprire il prodotto, esso non contiene componenti sostituibili, | causer aux personnes ou aux biens. Les produits doivent être installés, exploité et entretenus par personnel qualifié et en conformité avec les règlements. N'ouvrez pas le produit, il ne contient aucune pièce réparable, |
| Don't open the device, it does not contain replaceable components, the tripping of the internal fuse (if included) is caused by an internal failure. Don't repair or modify the device, if malfunction or failure | il guasto del fusibile interno (se previsto) è causato da un guasto interno. Non tentare di riparare o modificare il prodotto, se durante il funzionamento si verificano guasti o anomalie, inviarlo al produttore per il controllo. | le déclenchement du fusible interne (le cas échéant) est causé par un défaut interne. Ne pas essayer de réparer ou modifier le produit ; si des défaillances se produisent pendant le fonctionnement ou les dysfonctionnements, le retourner au |
| should occur during operation, send unit to the factory for inspection. No responsibility is assumed by Nextys SA for any consequences deriving from the use of this material. | Nextys SA non si assume nessuna responsabilità per qualunque conseguenza derivante dall'uso di questo materiale. | fabricant pour inspection. Nextys SA n'assume aucune responsabilité des conséquences éventuelles découlant de l'utilisation des produits. |
| CAUTION | ATTENZIONE | AVVERTISSEMENT |
| RISK OF BURNS, EXPLOSION, FIRE, ELECTRICAL SHOCK, PERSONAL INJURY. | RISCHIO USTIONI, ESPLOSIONE, INCENDIO, SCOSSA, LESIONI GRAVI. | RISQUE DE BRULURES, EXPLOSION, INCENDIE, ELECTROCUTION, DOMMAGE AUX PERSONNES. |
| Never carry out work on live parts! Danger of fatal injury! The product's enclosure may be hot, allow time for cooling product before touching it. Do not allow liquids or foreign | Non effettuare mai operazioni sulle parti sotto tensione! Pericolo di lesioni letali! Il contenitore può scottare, lasciar quindi raffreddare il dispositivo prima di toccarlo. Non far entrare liquidi | tension! Danger de mort! Le récipient peut produire des |
| objects to enter into the products. To avoid sparks, do not connect or disconnect the device | o oggetti estranei nel dispositivo. Per evitare scintille, non collegare o scollegare | faites pas pénétrer des liquides ou des corps étrangers dans l'appareil. Pour éviter des étincelles, ne pas connecter ou |
| before having previously turned-off input power and wait for internal capacitors discharge (minimum 1 minute). | l'apparecchiatura prima di avere tolto tensione di ingresso e prima che sia avvenuta la scarica dei condensatori interni (min. 1 minuto). | déconnecter l'équipement jusqu'à ce que vous avez supprimé la tension d'entrée et avant qu'elle n'ait lieu de décharge des condensateurs internes (minimum 1 minute). |

DECLARATION OF CONFORMITY



NEXTYS SA.

Via Luserte Sud 6, 6572 Quartino - Switzerland

Phone: +41-(0)91 840 14 46 / 840 14 48; Fax: +41-(0)91 840 14 47

E-mail: info@nextys.com

This Declaration of Conformity is suitable to the European Standard EN45014 "General criteria for supplier's declaration of conformity".

We declare under our sole responsibility that the device included in this box, has passed all processing inspections and the final test and it is in conformity with the product requirements, including all reference codes and supply specifications.

ROHS compliance: the product respects the EC requirements related to ROHS substances, according to "Restriction of Hazardous Substances" as per document 2011/65/UE REACH compliance: the product respects the EC requirements related to REACH SVHC directive (2015)

Note: all the reported information comes from our suppliers, NEXTYS SA. has not run any test to evaluate if the specific elements are present.

All indicated devices are designed according to the latest Reference standards, if not expressly indicated through the official documents or files, they have been tested through our internal pre-compliance testing. Consult directly on www.nextys.com the reference standards applied to each model.

Code Description

NPSM20-5 Single phase switching power supply IN 120 - 240Vac (110 - 345Vdc) / OUT 5Vdc - 4.0A
NPSM20-12 Single phase switching power supply IN 120 - 240Vac (110 - 345Vdc) / OUT 12Vdc - 1.65A
NPSM20-24 Single phase switching power supply IN 120 - 240Vac (110 - 345Vdc) / OUT 24Vdc - 0.85A

| Certifications and approvals | CE | CUL US LISTED IND.CONT.EQ. 4WX9 | RoHS 2011/65/EU | Pb |
|------------------------------|----------------|--|--------------------|--------------|
| | 2014/35/EU | (Low Voltage Directive) | | |
| | 2014/30/EU | (EMC directive) | | |
| | EN60950-1 | (Safety Standards) | | |
| | UL508 | (Certified - IND. CONT. EQ. 4WX9 file no. E356563) | | |
| | EN61000-6-2 | (Generic immunity standard for industrial environments) | | |
| Reference standards | - EN61000-4-2 | (Electrostatic discharge immunity test) | | |
| Reference Standards | - EN61000-4-3 | (Radiated, radio-frequency, electromagnetic field immunity test) | | |
| | - EN61000-4-4 | (Electrical fast transient/burst immunity test) | | |
| | - EN61000-4-5 | (Surge immunity test) | | |
| | - EN61000-4-11 | (Voltage dips, short interruptions and voltage immunity test) | | |
| | EN61000-6-3 | (Generic emission standard for residential environments) | | |
| | - EN55011 | (CISPR11 - EMC) | | |
| ` <u> </u> | · | · | The pro- | duct manager |

Date: 29.03.2018

Place: Quartino, Switzerland

The product manager

M Cimica Marius Ciorica

NPSM20 Series V5.0 www.nextys.com Page 2/5



USER INSTRUCTIONS

1) Description: DIN rail mountable primary switched-mode power supply with 90...264Vac (110...345Vdc) input, suitable for Single phase main line and DC line.

2) Installation: use DIN-rails according to EN60715. Installation should be made vertically (see Fig.4). For better device stability fix the rail to the wall close to the point where the device is to be mounted. In order to guarantee sufficient convection, we recommend observing a minimum distance to other modules (see Fig.3).

The device is provided with a thermal protection; a limited air flow can cause the thermal protection tripping.

The SMPS automatically restarts after cooling. To get normal operation reduce the temperature of the air surrounding the power supply, increase the ventilation or reduce the load (see Fig.8)

3) Connections: the device is equipped with screw terminal blocks. To avoid sparks, do not connect or disconnect the connectors before having previously turned-off input power and waited for internal capacitors discharge (minimum 1 minute)

In order to comply with UL certification, use appropriate copper cables of indicated cross section, designed for an operating temperatures of:

60°C for ambient up to 45°C

75°C for ambient up to 60°C

90°C for ambient up to 70°C

Strip the connecting ends of the wires according to the indication and ensure that all strands of a stranded wire enter the terminal connection (see Fig.5)

4) Input protection: the device input is provided with varistors against overvoltage. Input is provided with internal fuses 1AT/250Vac, thus an external short circuit/overcurrent protection must be provided by the end user (see Fig.6).

For operation on a single-phase system, a protection fuse on the phase must be provided.

Surge protection: it is strongly recommended to provide external surge arresters (SPD) according to local regulations.

5) AC input connection: the device can be connected to single-phase AC lines with Uin 120...240Vac (see Fig.7).

6) DC input connection: connect L terminal to (+) positive pole, N terminal to (-) negative pole. Rated voltage 110...345Vdc.

The device is also suitable for photovoltaic or wind turbine applications (see Fig.7).

7) Output connection: The device is suitable for SELV and PELV circuitry.

Check Uout before connecting the power supply to the load. With output voltage set to the max. value, the continuous [current x voltage] must not exceed the nominal power.

8) Parallel connection and redundancy: power supplies can be connected in parallel to increase power.

For redundant connection, use an external isolating device must be used (see accessory device).

9) Output protection: the device is protected against overload (OL) / short circuit (SC) / overvoltage (OV) / overtemperature (OT).

OL and SC: are controlled by a hiccup mode auto-reset protection with the following behaviour.

OL behaviour: Max. OL = In x 1.6 with constant output voltage. If the current is | In x 1.6 the unit enters the OL protection and starts an ON/OFF cycle (hiccup mode).

SC behaviour: the device supplies the indicated short circuit peak current for 40ms if the output current exceeds In x 1.6 the device enters into a controlled ON/OFF cycles (hiccup mode). The output voltage drops to a voltage value depending on the impedance of the failed load circuit.

Output OV circuit protection: the output is protected against potential OV due to internal malfunction or coming from the load for Uout | Unom x 1.2 – 1.3, depending on the model

OT protection: turns off the device if the internal temperature exceeds a safe limit.

The device restarts automatically after cooling down. To recover to normal operation reduce air temperature surrounding the power supply, increase cooling or reduce load (see Fig.8).

10) Feeding DC motors: it is possible to feed DC motors considering that when a motor starts-up under effort its consumption is much higher than the nominal current and it can trigger overcurrent protection (see accessory device).

NOTE: motors can generate high conducted noise on the DC line. Therefore it is not recommended to feed on the same line motors and equipment sensitive to noise.



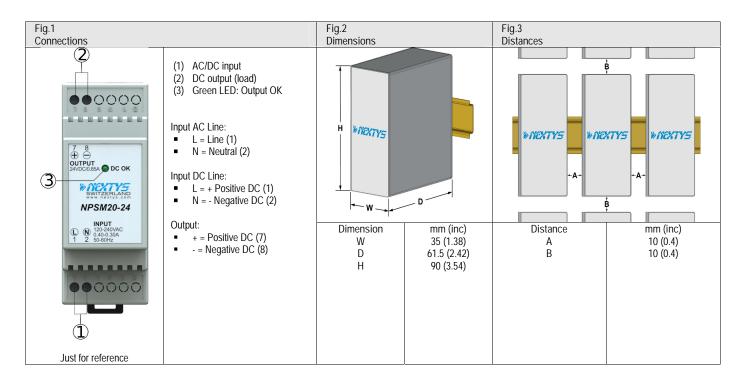



Fig.4

Mounting / Dismounting Instructions


For DIN rail fastening according to IEC 60715 TH35-7.5(-15)

Mounting as shown in figure, with input terminals on lower side, with suitable cooling and maintaining a proper distance between adjacent devices as specified in the I.S. manual of each family.

Mounting:

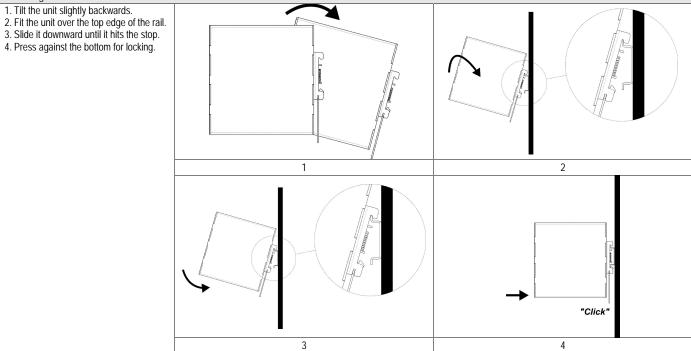



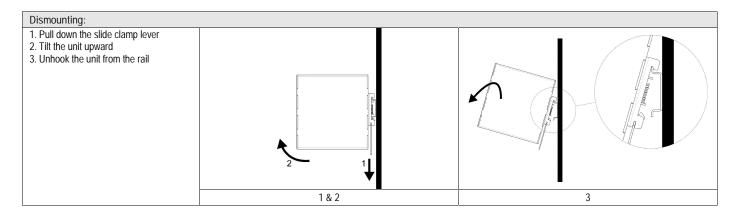

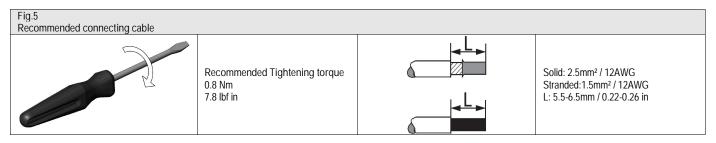



Fig.6 Input protection

Fuse 6AT or MCB 6A C curve.

In order to be UL compliant use only for NPSM20-5 Listed Cartridge nonrenewable (JDDZ) fuse Class CC 4AT 250Vac.

For USA and Canada, use the fuse type closest to the European equivalent type.

Surge protection: it is strongly recommended to provide external surge arresters (SPD) according to local regulations.

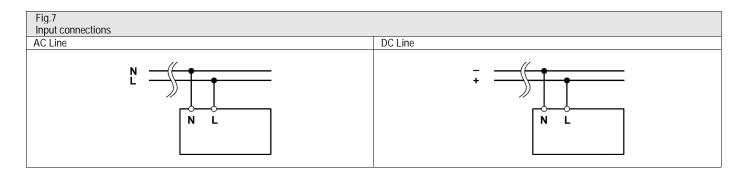

| Fig.8 Environment | |
|---|--|
| Operating temperature | Derating |
| - 40°C70°C 595% r.H. non condensing UL Certified up to 50°C for (-12, -24 models) UL Certified up to 70°C for (-5 model) Overtemperature protection | - 0.5W/°C over 50°C (-12, -24 models) - No derating for NPSM20-5 |

Note:

- Data may change without prior notice in order to improve the product.
- Please refer to the latest version of the "Instruction Manual" for each product by visiting www.nextys.com

| Se | e also the pi | oducts below that can be used in conjunction with NPSM20 units: | (accessory device) |
|----|---------------|---|--------------------|
| - | OR20 | 20A Active ORing controller | |
| - | NBP30 | Sealed Lead acid Battery pack | |