



TDK-Lambda UK Limited
Kingsley Avenue, Ilfracombe
Devon, EX34 8ES, United Kingdom
Tel: +44 (0) 1271 856600
Fax: +44 (0) 1271 864894
www.emea.lambda.tdk.com/uk

EU DECLARATION OF CONFORMITY

EFE400 Series

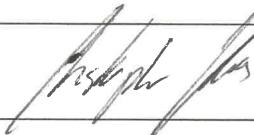
We, TDK-Lambda UK Limited, of Kingsley Avenue, Ilfracombe, Devon, EX34 8ES declare under our sole responsibility that the TDK-Lambda EFE400 series of power supplies, as detailed on the attached products covered sheets, complies with the provisions of the following European Directives and is eligible to bear the CE mark:

Low Voltage Directive	2014/35/EU
EMC Directive	2014/30/EU
RoHS Directive	2011/65/EU
RoHS Directive (EU)	2015/863

Assurance of conformance of the described product with the provisions of the stated EC Directive is given through compliance to the following standards:

Electrical Safety (LVD)	EN62368-1:2014 + AC:2017 + A11:2017
-------------------------	-------------------------------------

Our representative in the EU is TDK-Lambda Germany GmbH, located at Karl-Bold-Str. 40, 77885 Achern, Germany.

Name of Authorized Signatory	Christopher Haas
Signature of Authorized Signatory	
Position of Authorized Signatory	Technical Manager and Head of Quality & Compliance, TDK-Lambda Germany GmbH
Date	22 nd October 2019
Date when first CE marked	25 th February 2009
Place where signed	Achern, Germany

PRODUCTS COVERED SHEETS FOR THE EFE400 and EFE400R SERIES

EFE400 or EFE-400 models as described below:

Units may be additionally marked with a Product Code: U4x or Y4x where x may be any number of characters.

Unit Configuration Code (Description :) may be prefixed by NS # (where # may be any number of characters indicating non- safety related model differences).

Unit Configuration Code:

EFE400x-a-bcde-f-g-hij

Where:

x = Nothing or J for Japanese models (may have non-safety differences)

a = Channel 1 Output Voltage: any voltage within the Adjustment Range for the Vout (nom) from the Output Table below, e.g. 12.8 for 12.8V output (12Vout nom), 24.6 for 24.6V output (24Vout nom).

b = CN for Open Frame with fan output, CU for U chassis with fan output, CC for U chassis and cover with fan output, EC for U chassis and cover with fan (temperature controlled).

c = M for molex input connector or equivalent, J for JST connector or equivalent.

d = D for dual fused input, FL for single fuse input in the Live Line.

e = S for Standard Leakage, L for Low Leakage, R for Reduced Leakage, T for Tiny Leakage.*

f = Nothing for horizontal output connector, V for vertical output connector.

g = Nothing for standard channel 1 output voltage, xD or xPD where D is for units with programmed negative load regulation, PD is for units with programmed positive load regulation, x is the voltage of the regulation in 100mVolts and is within the Output Adjustment range (example, 7D = 0.7V of negative load regulation, 24PD = 2.4V of positive load regulation).

hij = Three numbers from 0 to 9 which denotes various output voltage/current settings within the specified ranges of each output for a particular unit or blank for standard output settings. (may define non-safety related parameters/feature, e.g. reduced primary current limit, reduced OVP).

Output Parameters

Standard models:

Output Channel	Vout Nom.	Adjustment Range (V)	Output Current (A)	Maximum Power (W)
Channel 1	12	11.4 - 13.2*	33.33	400 (530**)
	24	22.8 - 26.4*	16.67	400 (530**)
Fan output (optional)	12	Fixed	0.25	3

Variations and limitations of use:

1. Maximum ambient 70°C (de-rating output power 2.5% per °C above 50°C).
2. * Can be adjusted at the factory only.
3. Maximum continuous power output 400W (excluding fan output).
4. ** Peak power for 10 seconds maximum, maximum rms power of 400Wrms.

EFE400R or EFE-400R models as described below:

Units may be additionally marked with a Product Code: U4x or Y4x where x may be any number of characters.

Unit Configuration Code (Description :) may be prefixed by NS # (where # may be any number of characters indicating non- safety related model differences).

Unit Configuration Code:

EFE400Rx-a-bcde-km-f-g-hij

Where:

x = Nothing or J for Japanese models (may have non-safety differences)

a = Channel 1 Output Voltage: any voltage within the Adjustment Range for the Vout (nom) from the Output Table below.

b = CN for Open Frame with fan output, CU for U chassis with fan output, CC for U chassis and cover with fan output, EC for U chassis and cover with fan (temperature controlled), NN for open frame with no fan output.

c = M for molex input connector or equivalent, J for JST connector or equivalent.

d = D for dual fused input, FL for single fuse input in the Live Line.

e = S for Standard Leakage, L for Low Leakage, R for Reduced Leakage, T for Tiny Leakage.*

f = Nothing for horizontal output connector, V for vertical output connector.

g = Nothing for standard channel 1 output voltage, xD or xPD where D is for units with programmed negative load regulation, PD is for units with programmed positive load regulation, x is the voltage of the regulation in 100mVolts and is within the Output Adjustment range (example, 7D = 0.7V of negative load regulation, 24PD = 2.4V of positive load regulation).

hij = Three numbers from 0 to 9 which denotes various output voltage/current settings within the specified ranges of each output for a particular unit or blank for standard output settings. (may define non-safety related parameters/feature, e.g. reduced primary current limit, reduced OVP).

k = Y for or-ing device or N for none fitted.

m = E for enable or T for inhibit.

Output Channel	Vout Nom.	Adjustment Range (V)	Max Output Current (A)	Maximum Power (W)
Channel 1	48	47-50*	8.5	400 (470**)
Fan output (optional)	12	Fixed	0.25	3

Variations and limitations of use:

1. Maximum ambient 70°C (de-rating output power 2.5% per °C above 50°C).
2. * Can be adjusted at the factory only.
3. Maximum continuous power output 400W (excluding fan output).
4. ** Peak power for 10 seconds maximum, maximum rms power of 400Wrms.